

# **PR 30-HVS A12**



#### 1 Information about the documentation

#### 1.1 About this documentation

- Read this documentation before initial operation or use. This is a prerequisite for safe, trouble-free handling and use of the product.
- · Observe the safety instructions and warnings in this documentation and on the product.
- Always keep the operating instructions with the product and make sure that the operating instructions
  are with the product when it is given to other persons.

#### 1.2 Explanation of signs used

#### 1.2.1 Warnings

Warnings alert persons to hazards that occur when handling or using the product. The following signal words are used in combination with a symbol:



DANGER! Draws attention to imminent danger that will lead to serious personal injury or fatality.

**WARNING!** Draws attention to a potential hazard that could lead to serious personal injury or fatality.

**CAUTION!** Draws attention to a potentially dangerous situation that could lead to minor personal injury or damage to the equipment or other property.

#### 1.2.2 Symbols in the documentation

The following symbols are used in this document:



Read the operating instructions before use

Instructions for use and other useful information

#### 1.2.3 Symbols in the illustrations

The following symbols are used in illustrations:

2	These numbers refer to the corresponding illustrations found at the beginning of these operating instructions.
3	The numbering reflects the sequence of operations shown in the illustrations and may deviate from the steps described in the text.
11	Item reference numbers are used in the <b>overview illustrations</b> and refer to the numbers used in the <b>product overview section.</b>
	These characters are intended to specifically draw your attention to certain points when handling the product.

#### 1.3 On the product

#### Laser information

LASER NACULATION DD MAT STARE WITH BEAM Class 2 Laser Product	Laser Class 2 based on the IEC60825-1 / EN60825-1:2007 standard in com-
Networkingth: 625-600m Walkinstructurg Graver, Prive-Lifster W, LSDStyre This protect complies with EC 60005-1:001 and 101 PH and (1014) and (1014) EC 11 bit devotors in Schmitter Lifster Nation Mittig Graver and Schmitter	Do not stare into beam.

# 1.4 Product information

**Hilti** products are designed for professional use and may be operated, serviced and maintained only by trained, authorized personnel. This personnel must be informed of any particular hazards that may be encountered. The product and its ancillary equipment can present hazards if used incorrectly by untrained personnel or if used not in accordance with the intended use.

The type designation and serial number are stated on the rating plate.

Write down the serial number in the table below. You will be required to state the product details when contacting Hilti Service or your local Hilti organization to inquire about the product.

1

#### Product information

Rotating laser	PR 30-HVS A12
Generation	02
Serial no.	

# 2 Safety

# 2.1 Basic information concerning safety

**Read all safety instructions and other instructions.** Failure to observe the safety instructions and other instructions may result in electric shock, fire and/or serious injury.

Retain all safety precautions and instructions for future reference. The term "electric tool" used in the safety instructions refers to your mains-operated (corded) electric tool or battery-operated (cordless) electric tool.

#### 2.2 General safety rules

- Stay alert, watch what you are doing and use common sense when operating an electric tool. Do not use an electric tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating the electric tool may result in serious personal injury.
- Do not render safety devices ineffective and do not remove information and warning notices.
- Keep laser devices out of reach of children.
- Laser radiation in excess of Class 2 may be emitted if the device is opened without following the correct procedures. Have the device repaired only by Hilti Service.
- ► Laser beams should be projected well above or well below eye height.
- Take the influences of the surrounding area into account. Do not use the device where there is a risk of fire or explosion.
- Statement in accordance with FCC §15.21: Changes or modifications not expressly approved by Hilti may restrict the user's authorization to operate the equipment.
- You must check the accuracy of the device after it has been dropped or subjected to other mechanical stresses.
- When the device is brought into a warm environment from very cold conditions, or vice-versa, allow it to become acclimatized before use.
- Make sure that the device is mounted securely when adapters or accessories are used.
- ► Keep the laser exit aperture clean to avoid measurement errors.
- Although the tool is designed for the tough conditions of jobsite use, as with other optical and electronic instruments (e.g. binoculars, spectacles, cameras) it should be treated with care.
- Although the tool is protected to prevent entry of dampness, it should be wiped dry each time before being put away in its transport container.
- Check the tool before using it for important measuring work.
- Check the accuracy of the measurements several times during use of the tool.
- Ensure that the workplace is well lit.
- Do not expose the laser to rain or wet conditions.
- Avoid touching the contacts.
- Maintain the tool carefully. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the tool's operation. Have damaged parts repaired before using the tool. Many accidents are caused by poorly maintained tools.

#### 2.3 Proper preparation of the working area

- Secure the area in which you will be taking measurements. Make sure that the laser beam is not directed toward other persons or toward yourself while setting up the laser tool.
- Avoid unfavorable body positions when working from ladders. Make sure you work from a safe stance and stay in balance at all times.
- Readings taken in the vicinity of reflective objects or surfaces, through panes of glass or similar materials may produce incorrect results.
- Ensure that the tool is set up on a stable, level surface (not subject to vibration).
- Use the tool only within its specified limits.
- Use the tool and its accessories etc. in accordance with these instructions and in the manner intended for the particular type of tool. Take the working conditions and the work to be performed

into account. Use of tools for applications different from those intended could result in a hazardous situation.

#### Use of the telescopic staff in the vicinity of overhead high voltage cables is not permissible.

#### 2.4 Electromagnetic compatibility

Although the tool complies with the strict requirements of the applicable directives, **Hilti** cannot exclude the following possibilities:

The tool may be negatively affected by powerful electromagnetic radiation, possibly leading to incorrect
operation.

In these cases, or if you are otherwise unsure, confirmatory measurements should be made by other means.

The tool can cause interference to other devices (e.g. aircraft navigation equipment).

#### 2.5 Laser classification for Class 2 laser products

The tool complies with laser Class 2 as per IEC60825-1:2007 / EN60825-1:2007. This tool may be used without need for further protective measures.

# CAUTION

Risk of injury! Do not direct the laser beam toward persons.

 Never look directly into the source of the laser beam. In the event of direct eye contact, close your eyes and move your head out of the path of the laser beam.

#### 2.6 Careful use of battery-powered tools

- Do not expose batteries to high temperatures, the direct heat of the sun, and keep them away from fire. There is a risk of explosion.
- Do not disassemble, squash or incinerate batteries and do not subject them to temperatures over 80°C (176°F). This presents a risk of fire, explosion or injury through contact with caustic substances.
- Do not subject the battery to hard mechanical impacts and do not throw the battery.
- Batteries must be kept out of reach of children.
- Avoid ingress of moisture. Ingress of moisture may cause a short circuit, resulting in burning injuries or fire.
- Under abusive conditions, liquid may leak from the battery. Avoid contact with the liquid. If contact accidentally occurs, flush with water. If the liquid contacts the eyes, also seek medical attention. Liquid leaking from the battery may cause irritation or burns.
- Use only batteries of the type approved for use with the applicable tool. Use of other batteries or use of the batteries for purposes for which they are not intended presents a risk of fire and explosion.
- Store the battery in a cool and dry place. Never store the battery where it is exposed to direct sunlight or sources of heat, e.g. on heaters / radiators or behind glass.
- When not in use, keep the battery and the charger away from paper clips, coins, keys, nails, screws or other small metal objects that could cause a short circuit at the battery terminals or the charging contacts. Short-circuiting the contacts on a battery or charger may cause burning injuries or start a fire.
- Do not charge or continue to use damaged batteries (e.g. batteries with cracks, broken parts, bent or pushed-in and/or pulled-out contacts).
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for a certain type of battery may present a risk of fire when used with other types of battery.
- Observe the special guidelines applicable to the transport, storage and use of Li-ion batteries.
- The battery must be insulated or removed from the tool before the tool is shipped or sent by mail. Leaking batteries may damage the tool.
- If the battery gets noticeably hot when not in use, this may indicate that the battery or the tool / battery system is faulty. In this case, place the tool in a non-flammable location, well away from flammable materials, where it can be kept under observation and allowed to cool down.

3.1 Overview of the product

# 3.1.1 PR 30-HVS rotating laser



- 3 Grip
- ④ Battery release button

- Control panel
- (8) Base plate with 5/8" thread

# 3.1.2 PR 30-HVS control panel



- ① Inclined plane mode button and LED
- Shock warning function button and LED
- ③ LED arrow for electronic inclination alignment

- ④ Electronic inclination alignment button (only in combination with inclined plane mode)
- 5 Auto-leveling LED
- 6 On/off button

### 3.1.3 PRA 30 laser receiver and control panel

- Surveillance mode LED (only with automatic vertical alignment)
- (8) Battery charge status LED



- Volume button
- (2) Negative inclination to the left or downward with PRA 90
- ③ Automatic alignment / surveillance mode in the vertical plane (double-click)
- ④ Units key

(5) Positive inclination to the right or upward with PRA 90

7

9

- 6 On/off button
- Display
- ⑧ Marking notch
- 9 Detection area

# 3.1.4 PRA 30 laser receiver display



- 1 Indicator showing distance from laser plane
- 2 Volume indicator
- ③ Units key

Detection area
 Marking notch

# 3.1.5 Intended use

The product described is a rotating laser with a visible rotating laser beam. It can be operated by one person. The tool is designed to be used to determine, transfer and check levels, verticals, slopes and right angles. Examples of its uses are: transferring datum lines and height marks, determining right angles for walls, vertical alignment on reference points and setting out slopes.

- Use only the Hilti B 12/2.6 Li-Ion battery for this product.
- ▶ Use only the Hilti C 4/12-50 charger for this product.

5

#### 3.1.6 Features

The rotating laser can be used vertically, horizontally and for inclined planes.

The tool is equipped with the following operating status indicators: auto-leveling LED, inclined plane mode LED, surveillance mode LED and shock warning LED.

#### Auto-leveling

Auto-leveling takes place after the tool is switched on. LEDs indicate the current operating status. Auto-leveling is active within the ±5° range relative to the horizontal plane and can be deactivated by pressing the button. The tool can be set up directly on the ground or floor, on a tripod, or with the aid of suitable mounting brackets.

#### Automatic alignment

Automatic alignment allows a single person to bring the laser plane into alignment with the laser receiver. The rotating laser tool detects the applicable direction of alignment as follows:

- Horizontal in conjunction with the PRA 90 automatic tripod and PRA 30 laser receiver.
- Inclination in conjunction with the PRA 30 laser receiver, and (optional) with the PRA 79 slope adapter.
- · Vertical in conjunction with the PRA 30 laser receiver.

#### Inclination angle

The inclination can be set by the following means:

- Manual entry of the values at the PRA 30 laser receiver
- Automatic alignment of the rotating laser with the PRA 30 laser receiver
- Presetting an inclination through use of the PRA 79 slope adapter

The angle of inclination can be read from the laser receiver.

#### Surveillance when working in the vertical plane

The rotating laser monitors alignment of the laser plane in combination with the PRA 30 laser receiver. In the event of deviations in alignment, laser rotation stops for 40 seconds. During this time the tool corrects all errors caused by temperature fluctuations, wind or other influences. Laser rotation restarts after this automatic correction. If necessary, the surveillance function can be deactivated.

#### Automatic switch-off

The tool switches off automatically if it is unable to level itself because the laser:

- Is inclined at more than 5° relative to the horizontal plane (except in inclined plane mode).
- Is blocked mechanically.
- · Has been knocked off level by an impact or vibration.
- When the tool has switched itself off, rotation stops and all LEDs flash.

#### Shock warning function

If the laser is knocked off level during operation, the built-in shock warning function switches the tool to warning mode. The shock warning function does not go active until two minutes after completion of autoleveling. If a button on the control panel is pressed within this two-minute period it will take a further two minutes for the shock warning function to go active. If the laser is in warning mode:

- All LEDs flash.
- The laser stops rotating.
- The laser beam switches off.

The shock warning function can be switched off by pressing the 🔯 button if the ground or floor is not free from vibration or when you are working in inclined plane mode.

► Deactivate the shock warning function. → page 16

#### Laser receiver / remote control unit

Hilti laser receivers digitally indicate the distance between the marking notch on the laser receiver and the position at which the laser beam (laser plane) strikes the detection area on the receiver. The laser beam can also be received over long distances. The PRA 30 can be used as a laser receiver and also as a remote control unit for the rotating laser. The system of units and the unit of measurement can be set as desired.

- Set the units that are to be used. → page 19
- ► Change the units used by the laser receiver. → page 19

#### Pairing accessories and device

Pairing is the act of enabling accessories and devices to communicate with each other by wireless.

Enalish

6

The rotating laser and the laser receiver are already paired when supplied. This helps ensure trouble-free operation within the vicinity of other wireless devices.

Additional laser receivers or PRA 90 automatic tripods cannot be used without first being paired.

- ▶ Pair the rotating laser and the laser receiver. → page 18
- ► Pair the tripod and laser receiver. → page 19

#### 3.1.7 LED indicators

The rotating laser is equipped with an LED display.

Status	Meaning
All LEDs blink.	• The tool has been bumped, knocked off level or is subject to some other error.
The auto-leveling LED blinks green.	The tool is in the leveling phase.
The auto-leveling LED lights green constantly.	• The tool has leveled itself / is operating normally.
The shock warning LED lights orange constantly.	Shock warning mode is deactivated.
The inclination LED blinks orange.	Alignment in the sloping plane.
The inclination LED lights orange constantly	Inclined plane mode is active.
The surveillance LED blinks orange.	The tool is aligning the laser plane with the reference point (PRA 30).
The surveillance mode LED lights orange con- stantly.	• The tool is in surveillance mode. Alignment with the reference point (PRA 30) is correct.
The LED arrows blink orange.	The tool is in electronic inclination alignment mode, the PRA 30 is receiving no laser beam.
The LED arrows light orange constantly.	The tool is correctly aligned with the PRA 30.
The left LED arrow lights orange.	Rotate the tool clockwise.
The right LED arrow lights orange.	Rotate the tool counterclockwise.

#### 3.1.8 Li-ion battery charge state display

The Li-ion battery features a state of charge display.

Status	Meaning
4 LEDs light.	Charge status: 75 % to 100 %
3 LEDs light.	Charge status: 50 % to 75 %
2 LEDs light.	Charge status: 25 % to 50 %
1 LED lights.	Charge status: 10 % to 25 %
1 LED blinks.	Charge status: < 10 %



Note

When the tool is in operation, the battery charge status is indicated in the display on the tool. When not in operation, battery charge state can be indicated by lightly pressing the release button. During charging, charge state is indicated by the LEDs on the battery (please refer to the operating instructions for the charger).

### 3.1.9 Items supplied

PR 30-HVS A12 rotating laser, PRA 30 (03) laser receiver / remote control, 2 batteries (AA cells), PRA 83 laser receiver holder, 2 manufacturer's certificates, operating instructions.

You can find other system products approved for your product at your local **Hilti** Center or online at: **www.hilti.com**.

# 4 Technical data

# 4.1 Technical data for the rotating laser

	PR 30-HVS A12
	FR 30-1105 A12
Receiving range (diameter) PRA 30 (03)	2 m500 m
	(6 ft - 10 in1,640 ft - 10 in)
Communication range (PRA 30)	150 m
	(492 ft)
Accuracy at 10 m (under standard ambient conditions in	±0.5 mm
accordance with MIL-STD-810G)	(±0.02 in)
Laser class	Visible, Laser Class 2,
	620-690 nm/Po<4.85 mW ≥ 300 /min;
	EN 60825-1:2007; IEC 60825-1:2007
Self-leveling range	±5°
Operating temperature	−20 °C50 °C
	(−4 °F122 °F)
Storage temperature	−25 °C60 °C
	(−13 °F140 °F)
Weight (including battery)	2.5 kg
	(5.5 lb)
Drop test height (under standard ambient conditions in	1.5 m
accordance with MIL-STD-810G)	(4 ft - 11 in)
Protection class in accordance with IEC 60529 (except	IP66
battery and battery compartment)	
Plumb beam	Constant beam, perpendicular to the
	plane of rotation

# 4.2 Technical data for the laser receiver

Length of the detection area $\leq 120 \text{ mm}$ Center indication from top edge of casing     75 mm       (3.0 in)     (3.0 in)
Laser plane display range       ±0.5 mm (±0.02 in)         Length of the detection area       ≤ 120 mm (≤ 4.7 in)         Center indication from top edge of casing       75 mm (3.0 in)
Laser plane display range       ±0.5 mm (±0.02 in)         Length of the detection area       ≤ 120 mm (≤ 4.7 in)         Center indication from top edge of casing       75 mm (3.0 in)
(±0.02 in)           Length of the detection area         ≤ 120 mm (≤ 4.7 in)           Center indication from top edge of casing         75 mm (3.0 in)
Length of the detection area       ≤ 120 mm (≤ 4.7 in)         Center indication from top edge of casing       75 mm (3.0 in)
(≤ 4.7 in)           Center indication from top edge of casing         75 mm           (3.0 in)
Center indication from top edge of casing 75 mm (3.0 in)
(3.0 in)
Time without detection before automatic power off 15 min
Range of remote control unit (diameter) for the PR 30- 2 m 150 m
HVS (6 ft - 10 in492 ft)
Drop test height in the PRA 30 laser receiver holder 2 m
(under standard ambient conditions in accordance with (6 ft - 10 in)
MIL-STD-810G)
Operating temperature -20 °C 50 °C
(-4 °F122 °F)
Storage temperature -25 °C60 °C
(−13 °F140 °F)
Weight (including batteries) 0.25 kg
(0.55 lb)
Protection class in accordance with IEC 60529 (except IP66
battery compartment)

8 English

Printed: 10.11.2016 | Doc-Nr: PUB / 5314332 / 000 / 00

#### 5 Operating the rotating laser

#### 5.1 Preparations at the workplace

### CAUTION

Risk of injury! Inadvertent starting of the product.

Remove the battery before making any adjustments to the power tool or before changing accessories.

Observe the safety instructions and warnings in this documentation and on the product.

### 5.2 Handling the laser and battery correctly

#### Note **≽**¶<

The B12 battery has no protection class. Do not expose the battery to rain or wet conditions. In accordance with the Hilti instructions, the battery may be used only with the associated product and must be inserted in the battery compartment for this purpose.



- 1. Fig. 1: Working in horizontal mode.
- 2. Fig. 2: In inclined plane mode, the laser should be lifted at the control panel side.
- 3. Fig. 3: Laying down or transporting in an inclined position. Working in the vertical plane.
  - I Hold the laser so that the battery compartment does NOT face upwards, so that no moisture can enter.



# CAUTION

- Electrical hazard. Dirty contacts may cause a short circuit.
  - Check that the contacts on the battery and on the tool are free from foreign objects before inserting ► the battery.



# CAUTION

Risk of injury. If the battery is not fitted correctly it may drop out and fall.

- Check that the battery is securely seated in the tool so that it cannot drop out and fall, thereby presenting a hazard to other persons.
- 1. Push the battery in until it engages securely.
  - The laser is ready to switch on.
- Press the release button and hold it in this position.
- 3. Pull the battery out.

#### 5.4 Switching the laser on and working in the horizontal plane

#### Note **.**

Check the accuracy of the laser tool before using it for important tasks, especially if it has been dropped or subjected to unusual influences or impacts etc.



- 1. Mount the laser on a suitable holder or bracket.
- 2. Press the (1) button.
  - The auto-leveling LED flashes green.
  - As soon as the tool has leveled itself, the laser beam switches on and begins to rotate and the "auto" leveling" LED shows steadily.

### Note

A wall bracket or tripod may be used as mounting devices. The angle of inclination of the surface on which it stands should not exceed  $\pm 5^{\circ}$ .

#### 5.5 Manual horizontal alignment

# Rote

The rotating laser is mounted on the PRA 90 automatic tripod.

The PRA 30 laser receiver, the rotating laser and the PRA 90 automatic tripod are paired. The PRA 30 laser receiver and the control panel of the PRA 90 automatic tripod are facing each other and in direct line of sight.



- 1. Press the (1) button on the rotating laser, on the PRA 30 laser receiver and on the PRA 90 automatic tripod.
  - The devices are ready for use.
- 2. To shift the laser plane up, press the 🖆 button on the PRA 30 laser receiver or the "up" arrow button on the PRA 90 automatic tripod.
- 3. To shift the laser plane down, press the stutter button on the PRA 30 laser receiver or the "down" arrow button on the PRA 90 automatic tripod.

#### 5.6 Automatic horizontal alignment

# **≽ę**∈ Note

The rotating laser is mounted on the PRA 90 automatic tripod. The PRA 30 laser receiver, the rotating laser and the PRA 90 automatic tripod are paired. The PRA 30 laser receiver and the control panel of the PRA 90 automatic tripod are facing each other and in direct line of sight.



1. Press the (i) button on the rotating laser, on the PRA 30 laser receiver and on the PRA 90 automatic tripod.

The devices are ready for use.

- Keep the marking notch on the PRA 30 laser receiver at the height that is to be set. The PRA 30 laser receiver should be held steady or secured in place.
- 3. Begin automatic alignment by double-clicking the 🗃 button on the PRA 30 laser receiver.
  - The PRA 90 automatic tripod moves up and down until the correct position is reached. An signal tone is emitted repeatedly during this procedure.
  - The rotating laser levels itself once the tripod has reached the correct position. Successful completion is indicated by a continuous signal tone with a duration of 5 seconds. The symbol is no longer shown.
  - If automatic alignment cannot be completed successfully, short signal tones are emitted and the amin symbol disappears.
- 4. Check the height setting in the display.
- 5. Remove the PRA 30 laser receiver.
- Stop automatic alignment before completion by double-clicking the automatic alignment before alignment before completion by double-clicking the automatic alignment before completion by double-clicking the automatic alignment before alignment

#### 5.7 Manual vertical alignment

#### ≽**ę**∈ Note

The rotating laser is placed or securely mounted in the vertical position (tripod, wall mount, facade or batter board adapter, or lying on the rear grips). A reference point (A) is marked below the laser head (e.g. a nail on a batter board or a spot of paint on the floor or ground).

The PRA 30 laser receiver and the rotating laser are paired.

The PRA 30 laser receiver and the receiving side of the rotating laser are facing each other and in direct line of sight. The best receiving side of the rotating laser is the side at which the battery is inserted.



- 1. Use the visual sighting method (target notch on the head) to line up the vertical axis of the rotating laser.
- 12 English

- 2. Press the (1) button on the rotating laser.
  - The rotating laser levels itself and then projects a stationary downward-pointing laser beam.
- 3. Position the rotating laser so that the projected laser beam strikes reference point (A) exactly. Please note: The reference point is not a plumb point!
- 4. To shift the laser plane to the right or left, press the 🗳 or 🐂 button on the PRA 30 laser receiver.
  - The rotating laser begins rotating after pressing one of the two direction arrow buttons.

#### 5.8 Automatic vertical alignment

# Ref Note

The rotating laser is placed or securely mounted in the vertical position (tripod, wall mount, facade or batter board adapter, or lying on the rear grips). A reference point (A) is marked below the laser head (e.g. a nail on a batter board or a spot of paint on the floor or ground).

The PRA 30 laser receiver and the rotating laser are paired.

The PRA 30 laser receiver and the receiving side of the rotating laser are facing each other and in direct line of sight. The best receiving side of the rotating laser is the side at which the battery is inserted.



- 1. Use the visual sighting method (using the front and rear sights) to line up the vertical axis of the rotating laser.
- 2. Press the (1) button on the rotating laser.
  - The rotating laser levels itself and then projects a stationary downward-pointing laser beam.
- 3. Position the rotating laser so that the projected laser beam strikes reference point (A) exactly. Please note: The reference point is not a plumb point!
- 4. Keep the marking notch on the PRA 30 laser receiver on the plane that is to be set. The PRA 30 laser receiver should be held steady or secured in place.
- 5. Begin automatic alignment by double-clicking the 🗃 button on the PRA 30 laser receiver.
  - The head of the rotating laser pivots to the left and right until the desired position is reached. An signal tone is emitted repeatedly during this procedure.
  - The rotating laser levels itself once the position has been reached. Successful completion is indicated by a continuous signal tone with a duration of 5 seconds. The an symbol disappears.
  - $\triangleleft~$  The rotating laser switches to surveillance mode. Surveillance when working in the vertical plane  $\rightarrow$  page 6
  - If automatic alignment cannot be completed successfully, short signal tones are emitted and the symbol disappears.
- 6. Do NOT remove the PRA 30 laser receiver from the target plane so long as surveillance mode is active.
- 7. Double-click the 🗃 button on the PRA 30 laser receiver.
  - During automatic alignment: Stops automatic alignment before completion.
  - In surveillance mode: Ends surveillance mode.

#### 5.9 Setting the inclination using the PRA 79 slope adapter

# ∋**ę**∈ Note

Depending on the application, the PRA 79 slope adapter can be mounted on a tripod. The angle of inclination of the PRA 79 slope adapter is set to 0°.

- Mount the rotating laser on the PRA 79 slope adapter. Observe the operating instructions for the PRA 79 slope adapter. The control panel of the rotating laser should be facing you.
- 2. Position the rotating laser either at the upper edge or lower edge of the inclined plane.
- Press the 1 button on the rotating laser.
  - The laser switches on, the beam begins to rotate and the "auto leveling" LED lights as soon as the tool has leveled itself.
- Press the ∠ button on the rotating laser.
  - The inclined plane mode LED on the rotating laser then blinks.
- 5. Set the PRA 79 slope adapter to the desired angle of inclination.

# Note

When the angle of inclination is set manually, the rotating laser levels the laser plane once and then fixes it. Vibration, changes in temperature or other influences that may occur during the course of the day may affect the position of the laser plane.

#### 5.10 Setting the inclination manually

# Note

The rotating laser, depending on the application, is mounted or positioned securely.

The PRA 30 laser receiver and the rotating laser are paired.

The PRA 30 laser receiver and the receiving side of the rotating laser are facing each other and in direct line of sight. The best receiving side of the rotating laser is the side at which the battery is inserted.



- 1. Position the rotating laser either at the upper edge or lower edge of the inclined plane.
- 2. Position yourself behind the rotating laser with the control panel facing you.
- 3. Press the (1) button on the rotating laser and the PRA 30 laser receiver.
  - The laser switches on, the beam begins to rotate and the "auto leveling" LED lights as soon as the tool has leveled itself.
- Press the ∠ button on the rotating laser.
  - The inclined plane mode LED on the rotating laser then blinks.
  - The inclined plane mode symbol is shown on the PRA 30 laser receiver.
- 5. Use the target notch on the head of the tool to align the rotating laser parallel to the inclined plane.
- To lower the laser plane ahead of the rotating laser, press the and the PRA 30 laser receiver repeatedly until the desired value is shown in the display.
- 7. To raise the laser plane ahead of the rotating laser, press the another the PRA 30 laser receiver repeatedly until the desired value is shown in the display.

14 Enalish

If no button is pressed within 3 seconds, the rotating laser levels itself to the previously set value. The inclined plane mode LED lights.

# 📢 Note

A long press of the button causes the entered value to change rapidly.

#### 🗧 Note

When the angle of inclination is set manually, the rotating laser levels the laser plane once and then fixes it. Vibration, changes in temperature or other influences that may occur during the course of the day may affect the position of the laser plane.

#### 5.11 Setting the inclination automatically

#### ∋**ę**∈ Note

The rotating laser, depending on the application, is mounted or positioned securely.

The PRA 30 laser receiver, depending on the application, is mounted on a receiver holder and telescopic staff.

The PRA 30 laser receiver and the rotating laser are paired.

The PRA 30 laser receiver and the receiving side of the rotating laser are facing each other and in direct line of sight. The best receiving side of the rotating laser is the side at which the battery is inserted.



- 1. Position the rotating laser either at the upper edge or lower edge of the inclined plane.
- Hold the PRA 30 laser receiver right beside the rotating laser and adjust the height the PRA 30 laser receiver so that the marking notch is at the height of the laser plane. Fix the height of the telescopic staff.
- 3. Position the telescopic staff with the PRA 30 laser receiver at the other edge of the inclined plane.
- 4. Press the (1) button on the rotating laser and the PRA 30 laser receiver.
  - The laser switches on, the beam begins to rotate and the "auto leveling" LED lights as soon as the tool has leveled itself.
- 5. Press the  $\measuredangle$  button on the rotating laser.
  - The inclined plane mode LED on the rotating laser then blinks.
  - In the inclined plane mode symbol is shown on the PRA 30 laser receiver.
- 6. Begin automatic alignment by double-clicking the 🗿 button on the PRA 30 laser receiver.
  - The rotating laser inclines the laser plane automatically until the mark at the PRA 30 laser receiver is reached. An signal tone is emitted repeatedly during this procedure.
  - The rotating laser levels itself once the position has been reached. Successful completion is indicated by a continuous signal tone with a duration of 5 seconds. The symbol disappears.
  - If automatic alignment cannot be completed successfully, short signal tones are emitted and the indication in the display disappears.
- 7. Read the inclination from the PRA 30 laser receiver within 5 seconds.
- Stop automatic inclination before completion by double-clicking the automatic inclination by double-clicking the automatic inclination

#### < Note

If the rotating laser begins the automatic search in the wrong direction, press the automatic search in the wrong direction, press the automatic search is the search direction.

#### 5.12 Alignment using electronic inclination alignment (e-targeting)

#### Note

Electronic inclination alignment optimizes manual alignment of the rotating laser. The electronic method is more accurate.

### Note

The rotating laser, depending on the application, is mounted or positioned securely. The PRA 30 laser receiver and the rotating laser are paired.

The PRA 30 laser receiver and the receiving side of the rotating laser are facing each other and in direct line of sight. The best receiving side of the rotating laser is the side at which the battery is inserted.

- 1. Set the inclination of the laser plane automatically. → page 15
- Press the D button on the rotating laser.
  - If both arrows blink, the PRA 30 laser receiver is receiving no signal from the rotating laser.
  - Use the marking notch on the PRA 30 laser receiver to bring the rotating laser into alignment.
  - If the left arrow lights and the rotating laser clockwise.
  - If the left right arrow lights , turn the rotating laser counterclockwise.
  - If both arrows light constantly for 10 seconds, alignment of the PRA 30 laser receiver is correct and the procedure ends.
- 3. Secure the rotating laser on the tripod in this position.
- 4. Stop electronic inclination alignment before completion by double-clicking the abutton on the rotating laser.

#### 5.13 Deactivating the shock warning function

- 1. Switch the laser on. → page 10
- Press the 🛄 button.
  - The shock warning deactivation LED lights constantly, indicating that the function has been deactivated.

# e Note

To return to standard operating mode, switch the laser tool off and then switch it back on again.

#### 5.14 Activating / deactivating sleep mode

# ∋**ę**∈ Note

Sleep mode may be activated on the rotating laser during breaks between work or during other activities. All settings concerning the laser plane or inclination are retained while in this status. Sleep mode saves power and extends battery life.

Please also refer to "PRA 30 laser receiver menu options" for information about settings.

- 1. Switch the laser receiver off.
- Press the 
   button for 2 seconds.
- Press the sleep mode menu option.
- 4. Set the mode by pressing the 🚼 button. The status set is highlighted in black.
- 5. After ending sleep mode, check the laser settings in order to ensure continued working accuracy.



Sleep mode remains active for a maximum of 4 hours.



- 1. Set up the tripod approx. 20 m (66 ft) from a wall and adjust the tripod head horizontally with a spirit level.
- 2. Mount the tool on the tripod and use the visual sighting method (front and rear sights) to aim the tool at the wall.
- 3. Fig. a: Use the receiver to catch the laser beam and mark a point (point 1) on the wall.
- 4. Pivot the tool clockwise through 90° about its own axis. In doing so, ensure that the height of the tool does not change.
- 5. Fig. b: Use the laser receiver to catch the laser beam and mark a second point (point 2) on the wall.
- 6. Fig. c and d: Repeat the two previous steps twice and use the laser receiver to catch the beam and mark points 3 and 4 on the wall.

# Ref Note

If the procedure has been carried out accurately, the vertical distance between the two marked points 1 and 3 (main axis) or points 2 and 4 (transverse axis) should each be < 2 mm (at 20 m) (0.12" at 66 ft). If the deviation is greater than this, please return the tool to **Hilti** Service for calibration.



- 1. Place the tool in the vertical position on the floor or ground, which should be as flat as possible, approx. 20 m (66 ft) from a wall.
- 2. Align the grips parallel to the wall.
- 3. Switch the tool on and mark the reference point (R) on the ground or floor.
- 4. With the aid of the receiver, mark point (A) low on the wall.
- 5. With the aid of the receiver, mark point (B) at a height of approx. 10 m (33 ft).
- 6. Pivot the tool through 180° and realign it with the reference point (R) on the ground or floor and with point (A) at the base of the wall.
- 7. With the aid of the receiver, mark point (C) at a height of approx. 10 m (33 ft).
  - When this procedure is carried out carefully, the horizontal distance between the two marked points
     (B) and (C) should be less than 1.5 mm (at 10 m) (0.06 inch at 33 ft). If the deviation is greater than this, please return the tool to Hilti Service for calibration.

#### 6 Operating the laser receiver

#### 6.1 Inserting the batteries in the laser receiver



Insert the batteries in the laser receiver.

# Note

Use only batteries that have been manufactured in accordance with international standards.

#### 6.2 Pairing the rotating laser and the PRA 30 laser receiver

- 1. Press the 1 button on both devices for at least 3 seconds.
  - Successful pairing is confirmed by all LEDs blinking on the rotating laser a signal tone emitted by the PRA 30 laser receiver. The end symbol appears briefly on the laser receiver.
  - The rotating laser and the laser receiver switch themselves off.

- 2. Switch the devices on again.
  - The devices are paired. The o-o symbol is shown on the laser receiver.

#### 6.3 Pairing the PRA 90 tripod and the PRA 30 laser receiver

- 1. Press the (1) button on both devices for at least 3 seconds.
  - Successful pairing is confirmed by all LEDs blinking on the PRA 90 automatic tripod and by a signal tone emitted by the PRA 30 laser receiver. The eq symbol appears briefly on the laser receiver.
  - The automatic tripod and the laser receiver switch themselves off.
- 2. Switch the devices on again.
  - The devices are paired. The rotating laser and the automatic tripod are shown in the display on the laser receiver.

#### 6.4 Using the laser receiver to detect the laser beam

- 1. Press the (1) button on the laser receiver.
- 2. Hold the laser receiver with the receiving window directly in the plane of the laser beam.
- 3. Hold the laser receiver still while alignment is taking place and take care to ensure that the line of sight between the laser receiver and the tool is not obstructed.
  - Detection of the laser beam is indicated by visual and audible signals.
  - The laser receiver indicates the distance to the laser beam.

#### 6.5 Setting the units to be used

- 1. When switching the laser receiver on, press and hold the (1) button for two seconds.
  - The menu is then shown in the display.
- 2. Use the XX button to toggle between metric or imperial units of measurement.
- 3. Switch off the laser receiver by pressing the (1) button.
  - If the settings will be saved.

#### 6.6 Changing the units used by the laser receiver

- 1. When switching the laser receiver on, press and hold the 0 button for two seconds.
  - The menu is then shown in the display.
- 2. Press the 11 button repeatedly.
  - The desired accuracy (mm/cm/off) is shown alternately in the digital display.
- Switch off the laser receiver by pressing the (1) button.
  - The settings will be saved.

### 6.7 Adjusting the volume level on the laser receiver

- Press the 
   button repeatedly.
  - The digital display cycles through the volume levels (low/normal/high/off).

#### 6.8 Adjusting the signal tone on the laser receiver

- 1. When switching the laser receiver on, press and hold the (1) button for two seconds.
  - The menu is then shown in the display.
- 2. Use the 🛋 button to assign the rapid signal tone to the upper or lower detection area.
- 3. Switch the laser receiver off by pressing the (1) button.
  - $\triangleleft$  The settings will be saved.

### 6.9 PRA 30 Menu options

The laser receiver is switched off.

Press the (1) button for 2 seconds.

Menu option fig.1 is displayed.

To switch between the menu options, press the 4 or 4 direction buttons.

Note

<sup>&</sup>quot;Normal" is the default volume when the laser receiver is switched on.

# Note

To save the settings, switch the laser receiver off.



Fig. 1: Measuring unit system and units

Please refer to the description of the unit system and how to set the units.

Fig. 2: Software version

- · Shows the current software version; no settings can be made.
- Fig. 3: Sleep mode
- Use the XX units button to set the mode to on or off. The status set is highlighted in black.

Fig. 4: Inclination units

 Use the t units button to set the units to be used. You can choose between inclination in % and inclination in °.

Fig. 5: Pairing with a rotating laser

 Status shown: The PRA 30 and the rotating laser are paired <sup>coop</sup>. To cancel the pairing: Select <u>or</u>. The status set is highlighted in black.

Fig. 6: Pairing with PRA 90

- Status shown: PRA 30 and PRA 90 are paired e. To cancel the pairing: Select e.
   The status set is highlighted in black.
- Fig. 7: Shock warning sensitivity

Use the XX units button to set the sensitivity.
 The choice is: High sensitivity (top); Medium sensitivity (middle); Low sensitivity (bottom).

Fig. 8: Wireless connection

Use the <sup>x</sup> units button to set the mode to on or off.

#### 6.10 PRA 83 laser receiver with holder



- 1. Fit the laser receiver into the rubber sleeve of the PRA 83 at an angle from above.
- 2. Then press the laser receiver into the rubber sleeve until the sleeve surrounds the laser receiver completely.
- 3. Fit the rubber sleeve onto the magnetic grip piece.
- 4. Press the (1) button.
- 5. Unscrew the clamping knob on the grip piece slightly.
- 6. Mount the PRA 83 laser receiver on a telescopic staff or leveling staff and secure it by tightening the clamping knob.
  - The laser receiver is ready for taking measurements.

#### 7 Care and maintenance

#### 7.1 Care and maintenance of cordless tools

#### WARNING

• Risk of electric shock! Attempting care and maintenance with the battery fitted in the tool can lead to severe injury and burns.

► Always remove the battery before carrying out care and maintenance tasks!

#### Care and maintenance of the tool

- · Carefully remove any dirt that may be adhering to parts.
- · Clean the air vents carefully with a dry brush.
- Use only a slightly damp cloth to clean the casing. Do not use cleaning agents containing silicone as these may attack the plastic parts.

#### Care of the lithium-ion batteries

- Keep the battery free from oil and grease.
- Use only a slightly damp cloth to clean the casing. Do not use cleaning agents containing silicone as these may attack the plastic parts.
- Avoid ingress of moisture.

#### Maintenance

- Check all visible parts and controls for signs of damage at regular intervals and make sure that they all function correctly.
- Do not operate the cordless tool if signs of damage are found or if parts malfunction. Have the tool repaired by **Hilti** Service immediately.
- After cleaning and maintenance, fit all guards or protective devices and check that they function correctly.

#### Note

To help ensure safe and reliable operation, use only genuine Hilti spare parts and consumables. Spare parts, consumables and accessories approved by Hilti for use with the product can be found at your local **Hilti** Center or online at: **www.hilti.com** 



#### WARNING

**Risk of electric shock!** Attempting care and maintenance with the battery fitted in the tool can lead to severe injury and burns.

Always remove the battery before carrying out care and maintenance tasks!

#### Cleaning the laser exit window

- Blow dust off the laser exit window.
- Do not touch the laser exit window with your fingers.

# Note

Coarse cleaning materials can scratch the glass, impairing the accuracy of the device. Use only pure alcohol or water for cleaning, as other liquids can attack the plastic parts. Observe the temperature limits when drying the equipment.

#### 7.3 Hilti Measuring Systems Service

Hilti Measuring Systems Service checks the product and, if deviations from the specified accuracy are found, recalibrates it and checks it again to ensure conformity with specifications. The service certificate provides written confirmation of conformity with specifications at the time of the test. The following is recommended:

- A suitable test interval should be chosen in accordance with the degree of use.
- Have the product checked by Hilti Measuring Systems Service after exceptionally heavy use or subjection to unusual conditions or stress, before important work or at least once a year.

Having the product checked by **Hilti** Measuring Systems Service does not relieve the user of his/her obligation to check the product before and during use.

#### 7.4 Checking accuracy

In order to ensure compliance with the technical specifications, the tool should be checked regularly (at least before each major / relevant measuring task).

After falling from considerable height, the tool should be checked for correct, accurate operation. When the following conditions are fulfilled it can be assumed that the tool is operating faultlessly:

- The height of the fall did not exceed the height given in the technical data.
- The tool operated faultlessly before the impact.
- The tool suffered no obvious mechanical damage from the impact (e.g. breakage of the pentaprism).
- The tool projects a rotating laser beam when in operation.

#### 8 Transport and storage

#### 8.1 Transport and storage of cordless tools

#### Transport



#### CAUTION

**Inadvertent starting during transport.** Uncontrolled starting during transport may occur if the battery is fitted, thereby resulting in damage to the tool.

- Always remove the battery before transporting the tool.
- Remove the battery.
- Transport the tool and batteries individually packaged.
- Never transport batteries in bulk form (loose, unprotected).
- Check the tool and batteries for damage before use after long periods of transport.

# CAUTION

 $\triangle$ Inadvertent damage caused by defective battery. A leaking battery may damage the tool.

- Always remove the battery before storing the tool.
- Store the tool and batteries in a place that is as cool and dry as possible. •
- Never store batteries in direct sunlight, on heating units or behind a window pane.
- Store the tool and batteries in a place where they cannot be accessed by children or unauthorized persons.
- Check the tool and batteries for damage before use after long periods of storage.

# 9 Troubleshooting

If the trouble you are experiencing is not listed in this table or you are unable to remedy the problem by yourself, please contact Hilti Service.

Trouble or fault	Possible cause	Action to be taken
The tool doesn't work.	The battery is not fully inserted.	<ul> <li>Push the battery in until it engages with an audible click.</li> </ul>
	Low battery.	<ul> <li>Change the battery and charge the empty battery.</li> </ul>
The battery runs down more quickly than usual.	Very low ambient temperature.	<ul> <li>Warm up the battery slowly to room temperature.</li> </ul>
The battery doesn't engage with an audible click.	The retaining lugs on the battery are dirty.	<ul> <li>Clean the retaining lugs and refit the battery.</li> </ul>
The tool or battery gets very hot.	Electrical fault.	<ul> <li>Switch the tool off immediately, remove the battery, keep it under observation, allow it to cool down and contact Hilti Service.</li> </ul>
Not paired.	The devices are not paired.	<ul> <li>Pair the rotating laser and the laser receiver. → page 18</li> </ul>
Invalid entry.	Invalid entry; the command is not possible.	<ul> <li>Make a valid entry again. Read the operating instructions.</li> </ul>
The command is not possible; no reaction.	Valid entry, but the tool doesn't react.	<ul> <li>Check that all devices are switched on.</li> <li>Check that all devices are within direct range.</li> <li>Repeat the entry.</li> </ul>
Surveillance mode is active.	Surveillance mode is active. Re- alignment not possible.	<ul> <li>Check the positions of the rotating laser and the PRA 30 laser receiver.</li> <li>Check that all devices are within direct range.</li> <li>Restart automatic alignment.</li> </ul>

Trouble or fault	Possible cause	Action to be taken
Sleep	The tool is in sleep mode.	<ul> <li>Activate / deactivate sleep mode. → page 16</li> </ul>
Sleep mode is active.		
	Low battery in the rotating laser.	<ul> <li>Charge the battery.</li> </ul>
Low battery in the rotating laser.		

#### 10 Disposal

#### WARNING

Risk of injury. Hazards presented by improper disposal.

- Improper disposal of the equipment may have the following consequences: The burning of plastic components generates toxic fumes which may present a health hazard. Batteries may explode if damaged or exposed to very high temperatures, causing poisoning, burns, acid burns or environmental pollution. Careless disposal may permit unauthorized and improper use of the equipment. This may result in serious personal injury, injury to third parties and pollution of the environment.
- Dispose of defective batteries right away. Keep them out of reach of children. Do not disassemble or incinerate the batteries.
- Batteries that have reached the end of their life must be disposed of in accordance with national regulations or returned to Hilti.

Most of the materials from which **Hilti** tools and appliances are manufactured can be recycled. The materials must be correctly separated before they can be recycled. In many countries, your old tools, machines or appliances can be returned to **Hilti** for recycling. Ask **Hilti** Service or your Hilti representative for further information.

#### 11 Manufacturer's warranty

Please contact your local Hilti representative if you have questions about the warranty conditions.

#### 12 FCC statement (applicable in US) / IC statement (applicable in Canada)

The product complies with part 15 of the FCC Rules and RSS-210 of the IC.

- Operation is subject to the following two conditions:
- This device shall cause no harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Note

Changes or modifications not expressly approved by **Hilti** may restrict the user's authorization to operate the equipment.

24 Enalish



# Hilti Corporation

LI-9494 Schaan Tel.: +423/2342111 Fax: +423/2342965 www.hilti.com

Hilti = registered trademark of Hilti Corp., Schaan



20161108