

## Camlock Fitting Couplers for Pump Connections



- **Type A Adapters** are normally used with Type D couplers, but can be used with Type B and C couplers as well as DC (Dust Cap) of identical size.
- **Type B Couplers** are normally used with Type F adapters, but can be used with Type A and E adapters and DP (Dust Plug) of identical size.
- **Type C Couplers** are normally used with Type E adapters but can also be used with Type A and F adapters and DP (Dust Plug) of identical size.
- **Type D Couplers** are normally used with type A adapters but can be used with Type E and F adapters and DP (Dust Plug) of identical size.
- **Type E Adapters** are normally used with Type C couplers, but can be used with Type B and D couplers or DC (Dust Cap) of identical size.
- **Type F Adapters** are normally used with Type B couplers, but can also be used with Type C and D couplers or DC (Dust Cap) of identical size.
- **Dust Caps (DC)** can be used with type A, E and F adapters to seal the end of the connection.
- **Dust Plugs (DP)** can be used with type B, C and D couplers to seal the end of the connection.